
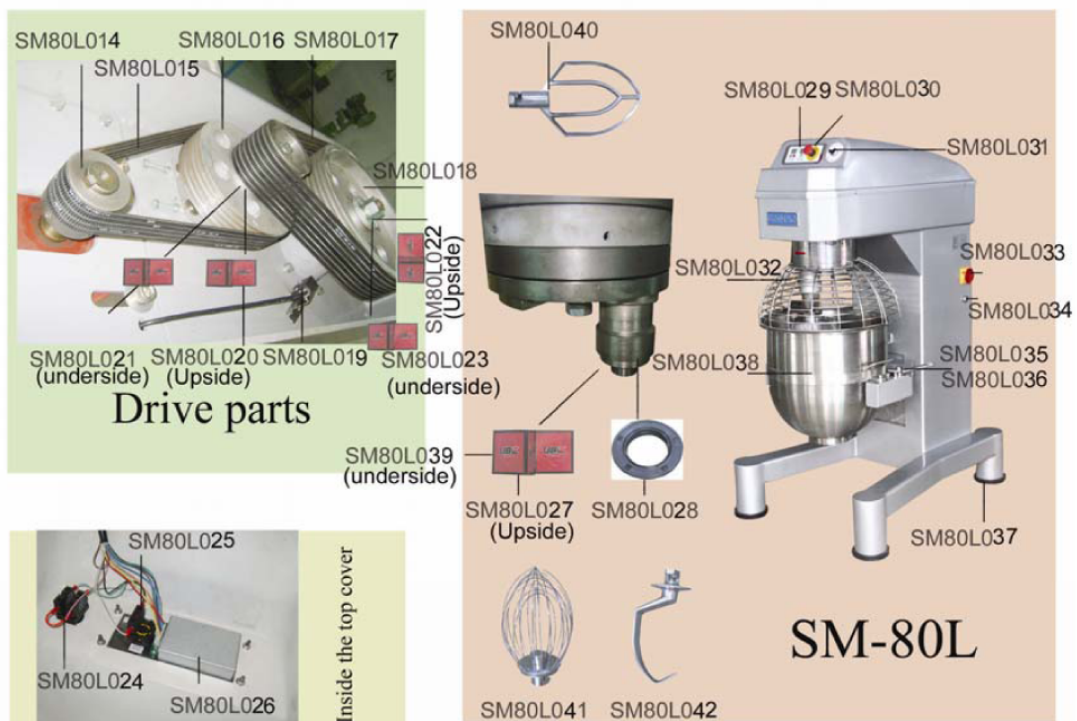


8. PARTS LIST

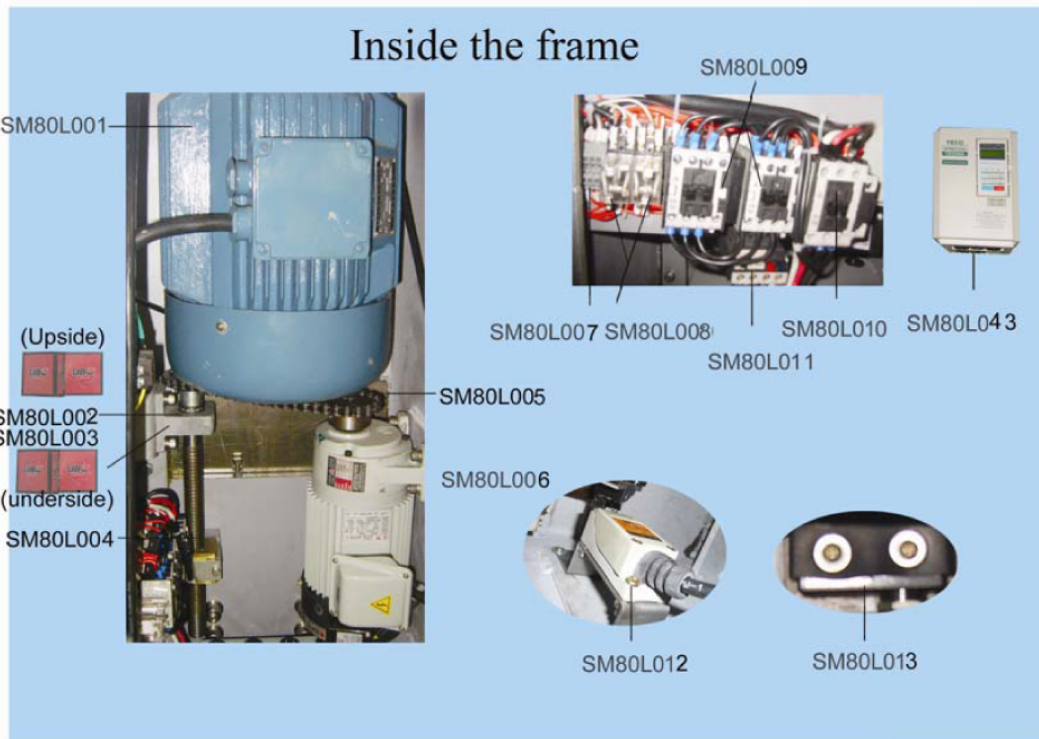

SM-80L PLANETARY MIXER PARTS LIST

Parts List	Parts Code	Parts Name	Specification
SM80L001	16MDL80L-1	Motor	380V-50Hz-3PH
SM80L002	15ZCL51104VV	Bearing	51104VV
SM80L003	15ZCL6004VV	Bearing	60042RS
SM80L004	14SM80L-20	Screw	
SM80L005	15LTL415H-55	Chain	
SM80L006	16JSJ80L	Motor	380v 3PH
SM80L007	16DZP280101	Plate	
SM80L008	16JDQJZX-18FF-1	Auxiliary relay	
SM80L009	16JCQCN16-2	Electromagnetic contactor	220V 50Hz
SM80L010	16JCQCN18-3	Electromagnetic contactor	220V 50Hz
SM80L011	16JDQRHN10A-11	Thermal relay	
SM80L012	16KGLTZ8108	Micro Switch	
SM80L013	16KGLTM1307	Micro Switch	
SM80L014	14SM80L-17E	Small belt wheel	
SM80L015	15PDL1090	Belt	7M-1090
SM80L016	14SM80L-70E	Drive belt wheel	
SM80L017	15PDL1180	Belt	
SM80L018	14SM80L-16E	Large belt wheel	
SM80L019	16KGLTM1307	Micro Switch	
SM80L020	15ZCL6306VV	Bearing	6306VV

SM80L021	15ZCL6207VV	Bearing	6207VV
SM80L022	15ZCL3308AVV	Bearing	3308AVV
SM80L023	15ZCL3309AVV	Bearing	3309AVV
SM80L024	16KGLM22	Lift switch	
SM80L025	16ANL03	Emergency switch	
SM80L026	16MBLOMX-022-T2	Panel	
SM80L027	15ZCL6207VV	Bearing	
SM80L028	15YFL456810	Oil seal	TC45*68*10
SM80L029	16MBLOMX-022-T2	Panel	
SM80L030	16ANL03	Emergency switch	
SM80L031	16KGLM22	Lift switch	
SM80L032	11SM80L-48	Safety grid	
SM80L033	16KGL3P20A	Main switch	
SM80L034	16ANL04	Start button	
SM80L035	14SM60L-33-02	Press handle(left)	
SM80L036	14SM60L-33-03	Press handle(right)	
SM80L037	14SM60L-23	Rubber mat	
SM80L038	11SM80L-29	Kneading bowl	
SM80L039	15ZCL6008VV	Bearing	
SM80L040	13SM80L-99	Beater	
SM80L041	14SM80L-100	Whipping ball	
SM80L042	11SM80L-98	Hook	
SM80L043	16BPQ80L-1	Transducer	7200MA 220V5.5KW