


#### WALK-IN COOLER AND FREEZER MANUAL

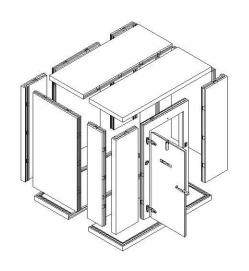

**Specifications** 

Installation Instructions

**Trouble Shooting** 

Warranty

Drawings

**Quote Form** 

U.S. Cooler 325 Payson Avenue, Quincy, Illinois 62301 800.521.2665 Fax 217.228.2424 www.uscooler.com

CRAIG INDUSTRIES

# Extruded Polystyrene Walk-in Cooler/Freezer Specifications

Size:				
Walk-in shall be x _	x x			
Construction:				
Walk-in shall be manufactur Approval and U.L. Certificatio walk-in. Panels shall be conr with walk-in. Cam locks must ily disassembled for relocation	on. Unit shall be con nected together by co t be able to be move	nstructed of modular panel am lock connectors activat d in case of future modifice	ls allowing easy set-u ed by an L-shaped al	p and installation of len wrench supplied
Drawings:				
Complete shop drawings musture.	t be supplied by Ma	nufactuer and submitted to	o customer for approv	al prior to manufac-
Materials:				
Walls, ceilings, and floor shal wall, ceiling, and floor panels gasket shall be provided on p of gasket material wraps arou	s, shall be manufactu panel edges to provi	ured using no wood produ	cts unless noted. A d	ouble-barreled vinyl
Insulation:				
All wall and ceiling insulation plied by Owens Corning or PC .125 and an R factor of no leshall be less than 1 perm and less than 165.	C-30 supplied by Dovess than 8 per inch,	w Chemical) for insulation, initial fresh R-32 minimun	1.6 lb. Density. K fac n total walls R factor.	tor of not more than Vapor transmission
Electrical:				
All electrical items shall be UI	approved for use in	n walk-in environments.		
Metal:				
All galvanized, galvalume, ar and ceilings shall be 24 gaug				stainless steel walls
Entrance Door:				
Door opening shall be	hrome latches and h with magnetic gaske n door heater wire cl e shall be temperatu	inges. Latch shall have in It enclosed between 2 eac hannel with snap on and c Ire self-regulated and field	side safety release ha h 1/2" vinyl sweeps v off 1 1/4" stainless ste replaceable. Door sho	indle. Door shall be when door is closed. eel cover. In freezer all be equipped with

with replaceable triple-edge wiper type sweep, which shall provide a seal resistant to oil, fats, water, and abrasion.

#### Packaging:

Door bears U.L. Certification.

Units shall come palletized on skids with protective corners, banding and covered in plastic wrap.

### **Expanded Polystyrene Walk-in Cooler Specifications**

Size:
Walk-in shall be x x
Construction:
Walk-in shall be manufactured to National Sanitation Foundation requirements and shall bear the NSF Seal of Approval and U.L. Certification. Unit shall be constructed of modular panel allowing easy set-up and installation of walk-in. Panels shall be connected together by cam lock connectors activated by an L-shaped allen wrench supplied with walk-in. Cam locks must be able to be moved in case of future modifications. Unit must have capacity to be easily disassembled for relocation or future expansion.
Drawings:
Complete shop drawings must be supplied by Manufacturer and submitted to customer for approval prior to manufac- ture.
Materials:
Walls, ceilings, and floor shall consist of interior and exterior metal laminated to rigid foam insulation. All wall, ceiling, and floor panels, shall be manufactured using no wood products unless noted. A double-barreled vinyl gasket shall be provided on panel edges to provide a vapor proof seal. Vinyl gasket must be installed so back edge of gasket material wraps around metal skin.
Insulation:
All wall and ceiling insulation shall be 4" thick, high quality, rigid expanded Polystyrene for insulation, 1 1/4 lb. Density, type VIII. A K factor of not more than fresh .22 and an R factor of no less than 4.5 per inch, initial R-18 minimum total walls R factor. Vapor transmission shall be less than 1.7 perm and foam core material must meet UL 25 flame spread rating with average smoke rating less than 150.
Electrical:
All electrical items shall be UL approved for use in walk-in environments.
Metal:
All galvanized, galvalume, and white wall, ceiling, and exterior floor skins shall be 26 gauge. All stainless steel walls and ceilings shall be 24 gauge. All stainless steel floor shall be 22 gauge.
Entrance Door:
Door opening shall be" x". Door shall be a self-closing flush mount style with magnetic gasket and

come complete with quality chrome latches and hinges. Latch shall have inside safety release handle. Door shall be fitted on top and both sides with magnetic gasket enclosed between 2 each 1/2" vynal sweeps when door is closed. Frame shall include snap on and off 1 1/4" stainless steel cover to allow magnetic gasket to seal. Door shall be equipped with automatic self-closer, vapor proof light, junction box, and light switch with pilot. Bottom edge of door shall be fitted with replaceable triple-edge wiper type sweep, which shall provide a seal resistant to oil, fats, water,

#### Packaging:

and abrasion. Door bears U.L. Certification.

Unit shall come palletized on skids with protective corners, banding and covered in plastic wrap.

### Installation Instructions













#### General:

- Check bill of lading for correct number of skids.
- Put on gloves before handling any panels.
- Check and report to trucking company and U.S. Cooler any damaged or missing items immediately.
- Remove packing list at end of skid and installation pack on door.
- Locate freezer/cooler drawing in installation pack (see figure 1) along with cam wrench (large L shaped allen wrench).

#### **Tools Required:**

- Cam-lock wrench (Provided)
- Gloves for handling panels
- Caulk gun and NSF silicone caulk
- Power drill with phillips driver and 1/8" drill bit
- Rivet Gun
- 1/2" metal drill bit

#### Floor Installation (Floored Units):

Locate skid(s) that have panel numbers starting with the letter F. These are floor panels. Using chalk line, measure out and mark floor for location of box. Lay the F1 floor-panel in the location designated on the floor plan drawing (see figure 2). Take the F2 floor panel and fit male side of F1 panel into female side of F2 panel. Align both ends until they are even (see figure 3). Insert cam wrench into center hole on F1 panel. If hook is showing, back cam counter clockwise until you reach a stop, but do not force cam. Turn cam wrench clockwise until a solid stop is reached (see figure 4). Again, do not force past stop. Check to see if F1 and F2 floor panels are firmly attached together. If not, repeat this step. Otherwise, lock remaining cams and go to next panels until all floor panels are assembled.

#### Screeding Installation (Floorless Units):

Using chalk line, mark location of box walls according to enclosed plans (see figure 5). Add 1/2" to each side for screeding oversize. Lay two beads of silicon caulk within the 4" wall location (see figure 6). Gray screeding can optionally be screwed down with Tapcon screws placed directly in the center of screeding (see figure 7). Seal top of screeding where it contacts metal skin with NSF approved silicone caulk.

#### **Wall Panels Installation:**

Start with corner wall consisting of W1 and the adjacent wall panel that forms the corner (see figure 8). On floor-less walk-ins, work panels into pre-installed screeding. On floored units, place male bottom of wall panel in female groove of floor panel. Make sure the floor arrow on the wall panel is pointing down. Once panel is inserted correctly, install W2 wall panel with W1 panel, male edge will be inserted into female edge of W2 panel. Special care should be given to ensure that top edges and sides of wall panels are flush (see figure 9). Take cam wrench and insert it into center hole of W1 panel. Be sure cam lock is set by first turning wrench in a counter clockwise direction until stop is felt. Do not force cam. After checking set of cam, turn wrench in a clockwise direction until stop is felt (see figure 10). Again, do not force cam. Check to see if panels are firmly locked together. If not, repeat this step. If they are, finish panel installation by locking all wall cams. Do not lock the panels to the floor until all wall and ceiling panels have been locked together. Continue installing wall panels by alternating from the lowest wall number to the highest wall number. On combination

### Installation Instructions (continued)

units, install center wall before continuing into cooler section. If the floor is uneven, adjustments must be made to ensure wall panels are flush at the top. When installing door panel, remove door by lifting door in an upward direction on panel and set aside until the frame is installed.

#### **Door Installation:**

Doors on rapid ship units can be installed in any of the standard full size wall panel locations, while special order units have fixed door locations. A door threshold hold down bar must be installed in the floor panel where the door is going to be installed. Place the hooks of the door threshold hold down bar, with the hooks going in the same direction of the cams, in to the slots on the cams. The hook on the bar should contact the pins in the cams. Gently tap the hold down bar in the direction of the cams and hooks until it quits moving, locking it in place with the cam hooks (approx.  $1 \frac{1}{2}$ ). Continue installation of wall panels.



Once wall panels are installed, proceed with C1 ceiling panel by placing it in location according to drawing (see figure 11). Align it so it is even on all edges. Many times uneven floors may cause ceiling to either be slightly bigger or smaller than wall panels. If this is the case, split the difference. All panels are made to allow adjustments due to varying installation conditions. Lock all cams according to previous instruction. After locking C1 panel, lift C2 panel into location so male side of C1 fits into female side of C2. Line up both ends and lock all cams (see figure 12). Continue installing ceiling panels from smallest number to largest number.

#### **Door Adjustments:**

After all panels have been installed, close walk-in door. If the door does not shut correctly, verify that the reveal between the door and frame is even around the perimeter (see figure 13). A reveal that increases or decreases across the top of the door indicates one leg of the door frame is lower than the other and will need to be shimmed to correct the condition. The door and frame should be flush around the perimeter. If one corner of the door protrudes from the frame, it indicates that the bottom of one door leg is not aligned with the other leg & the frame has a slight twist. Unlock the cams around the perimeter of the frame and move the door leg in or out to correct the condition, then re-lock the cams. Once box is completely installed and door alignment is verified, screw the threshold down to the threshold hold down bar on floored boxes and to the floor on floorless boxes with the stainless steel screws provided. On floorless units, attach L-shaped hold down bracket to door legs and floor (see figure 14).

### Caulking Instructions:


It is advisable, but not absolutely necessary, to caulk all joints inside walk-in. This will provide for an even better sealed unit. Use NSF approved silicone type caulking.

#### **Rain Roof Installation:**

Install evaporator coil prior to rain roof installation and silicone caulking around the carriage bolt heads to avoid perforating the rain roof. For rain roof installation, place vinyl-roofing material, with flaps underneath, on top of walk-in across narrow end. Allow 6"















(Continued on next page)

### Installation Instructions (continued)

#### Rain Roof Installation (continued):

of vinyl to lap over each of the three sides. Carefully unroll vinyl material across walk-in until vinyl flap falls into position. Take a stainless steel screw and square plate and screw through plate and flap in the middle of flap. Then screw a plate at each end of flap. Install screw and plate every foot across flap. Continue to roll out vinyl until the end or the next flap, then repeat screwdown process. Once the end is reached, it should lap over end by at least six inches. For units installed up against buildings, lap vinyl 1 foot up the wall, fold vinyl back and run two beads of Mastik caulk along wall edge 3" above walk-in. Then fold vinyl twice so there is 4" left to fasten plastic strip to building with. Fasten plastic strip over vinyl with stainless steel screws or galvanized nails. Place round piece of vinyl over each corner to protect against vinyl puncture. Place a bead of caulking around top sides of walk-in 5" below top of unit. Place plastic strip on top of vinyl so bottom of plastic strip falls 6" from the top. Screw into side of walk-in with stainless steel screws. Fold corners and continue around box on all four sides. Note: If vinyl hangs over more, cut off extra or fold extra under plastic strips.

#### Refrigeration Installation:

For side mount units, set refrigeration system over notched wall panel with compressor mounted on outside of walk-in. Drill through wall with 1/2' drill bit and bolt unit on with provided bolts. If unit has top mount self-contained refrigeration system to be installed, place unit in prefabricated hole in top of walk-in with air flow marker pointing away from wall. Caulk around perimeter of refrigeration unit. All refrigeration components must be installed by a certified refrigeration contractor, who must be present at startup. This may affect your warranty.

#### **Troubleshooting**

#### Ceiling overhangs walls:

If walls are racked at the top, loosen wall cams and adjust walls so the tops of the walls line up. If walls are level at the top, loosen corner wall panel and bump out wall panel to line up with outer edge of ceiling. Lock ceiling to wall and relock corner seam.

#### Door doesn't shut:

Check to make sure door closer is working properly and it is catching the hook. Checks to make sure walls aren't racked. See installation instructions for further door alignment information.

#### Door sags:

Check to make sure the floor is level. If not, shim as needed under correct door leg.

#### Ceiling panels won't pull down to lock into walls:

If walls have been locked to walk-in floor, unlock walls from the floor, lock ceiling panels down to walls and relock walls to floor.

#### Cam wrench is binding in cam hole:

Only insert the wrench far enough to catch the mechanism. Make sure you are inserting the tapered end of the wrench in the hole.

#### Cam lock not engaging (locking):

Make sure adjoining wall panels are flush on sides and top, so cams are lined up properly. Before locking, be sure to reset cam by turning it counter-clockwise until it resets. Do not over-reset cam. Then relock cam.

#### Door thermometer reads incorrect temperature:

Door thermometer doesn't register proper temperature. Make sure that the temperature probe is toward the center of the walk-in. Door thermometer may need to be calibrated. Place index finger on wide end of pointer. Insert screwdriver in pointer's slot and turn either clockwise (lowering temperature) or counterclockwise for raising temperature

#### **Customer Service Contact Information:**

U.S. Cooler Company 325 Payson Avenue Quincy, IL 62301

Toll Free: 800.521.2665 Phone: 217.228.2421 Fax: 217.228.2424

Email: customerservice@uscooler.com Company Website: www.uscooler.com Parts Website: www.walkincoolerparts.com

#### **U.S. Cooler Ten Year Limited Warranty**


U. S. Cooler Company, Inc. warrants to the original purchaser that the walk-in panels manufactured by the company are free from any defect in material or workmanship under conditions of normal use and service. The obligation of the manufacturer under this warranty shall be limited to repairing or replacing at their option FOB factory, panels of said walk-in which proves defective within ten years from the date of purchase. All hardware carries a standard one-year warranty.

Refrigeration equipment carries a standard one-year factory warranty for compressor and accessories. The obligation of the manufacturer under this warranty shall be limited to repairing or replacing at their option FOB factory, any part of said refrigeration system which proves defective within one year from the date of purchase. An extended four-year compressor warranty and a 1st day through 5th year labor warranty are also available as an option.


This warranty is in lieu of all other warranties expressed or implied and does not apply to equipment, which has been subject to any accident, alteration, abuse, misuse or improper installation. U.S. Cooler Company, Inc. expressly disclaims all other warranties expressed or implied. The standard warranty does not include any labor charges for replacement or repair of defective parts. In no event shall U.S. Cooler Company, Inc. be liable for any special, direct or indirect, incidental or consequential damages or for any lost product, lost profits or revenues or other losses or damages caused by lost product or lost profits or revenues, whether for breach of warranty or otherwise.

For warranty work on your U. S. Cooler walk-in cooler or freezer, call our Customer Service Department immediately. You will then be advised of the proper procedure to follow. NO warranty work is to be performed without an authorization number, which will be provided by the Customer Service Manager. U.S. Cooler assumes no responsibility for work performed without an authorization number.


#### Walk-in Cooler/Freezer Exploded View

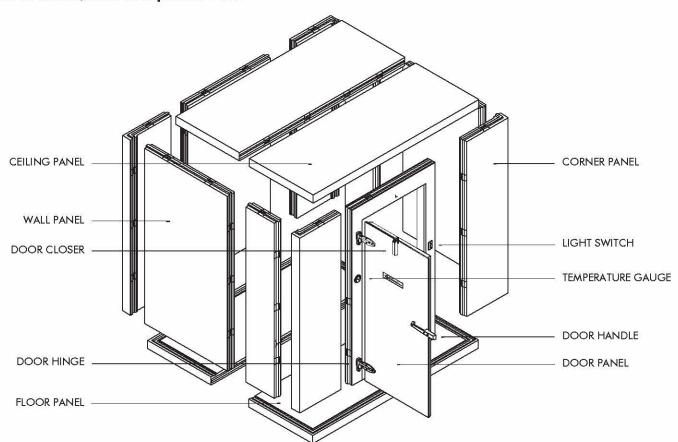


## **Door Drawings**

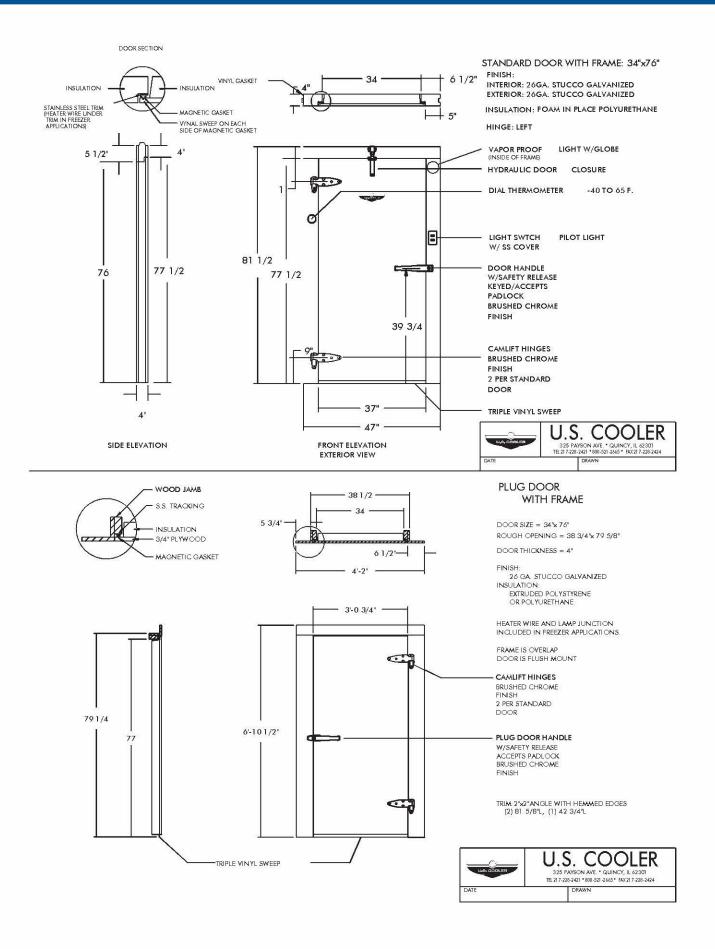


## Ceiling and Footing Drawings

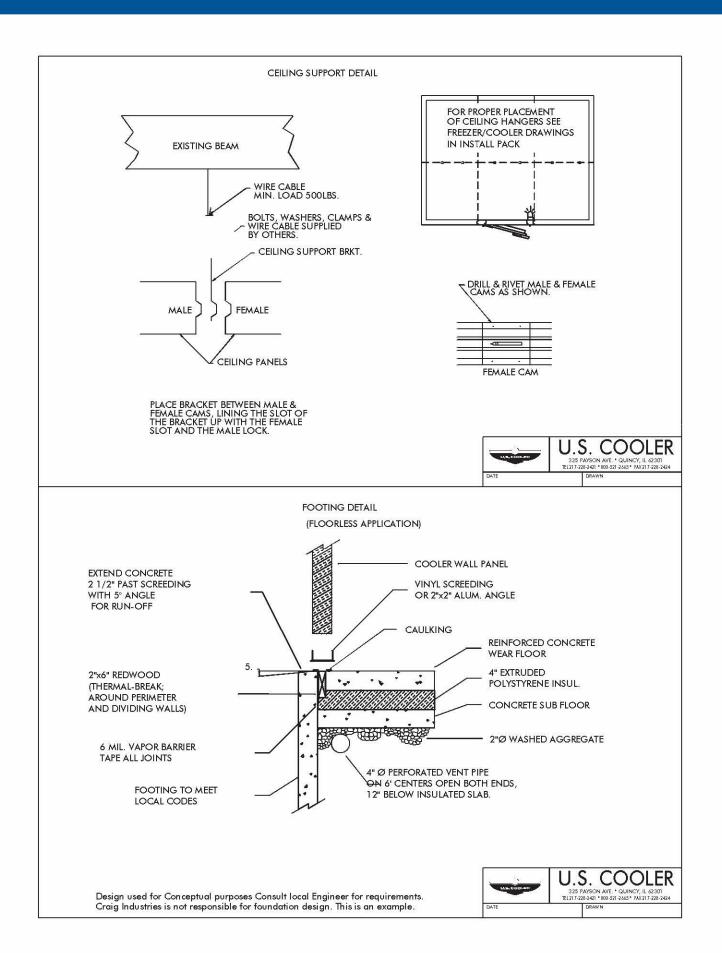

### **Refrigeration Drawings**

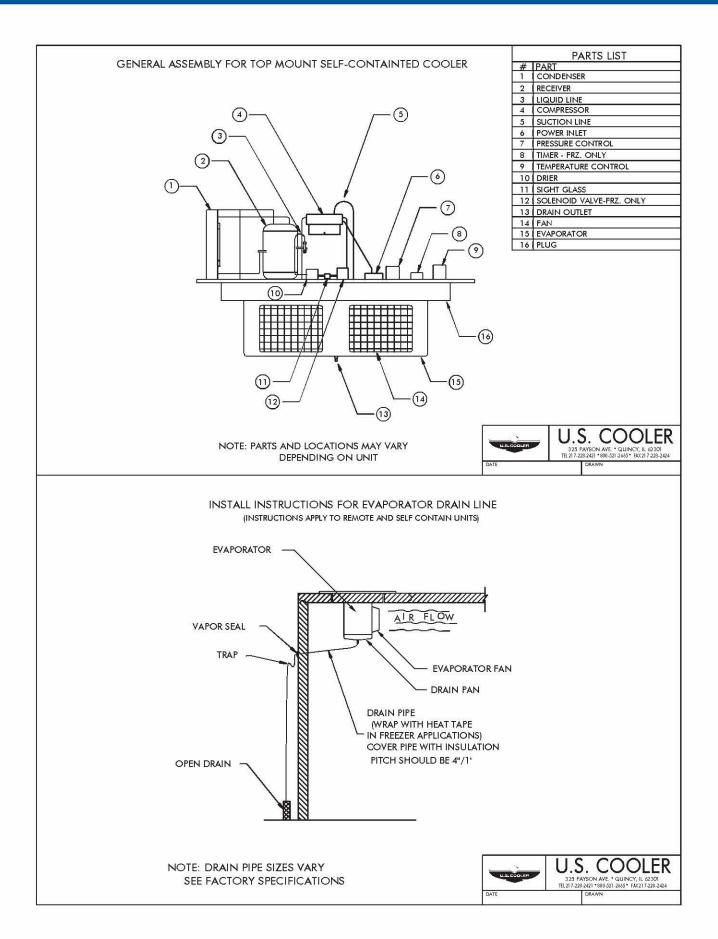

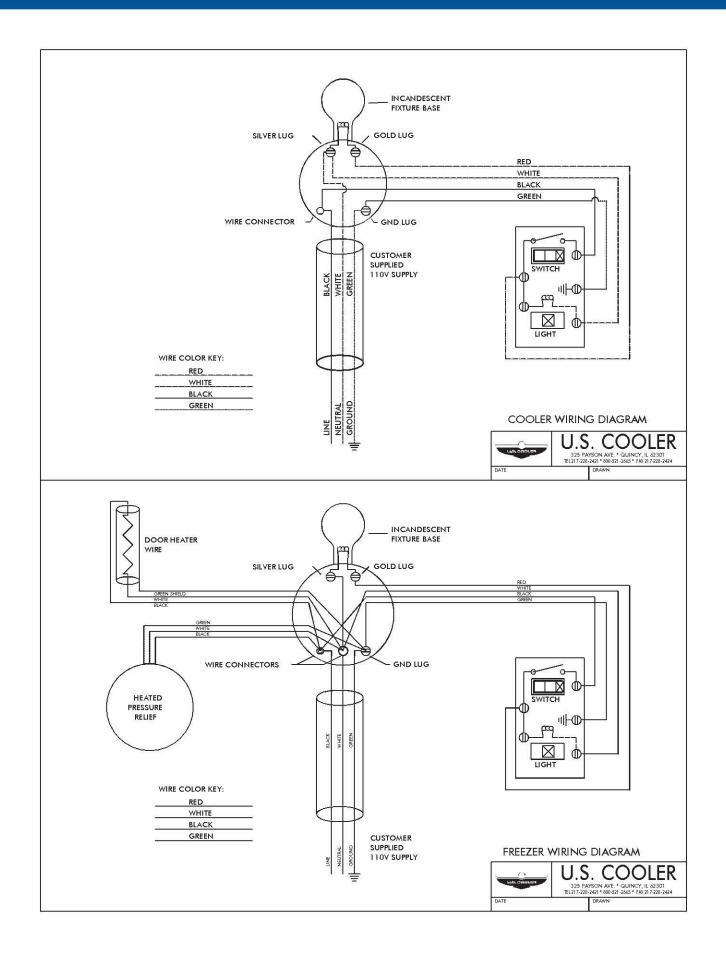

US COOLER QUOTE FORM										
Dealer Name				Job Ref						
Contact				Pnone						
			01-1-	I ax						
City				. ∠ıp		· · · · · · · · · · · · · · · · · · ·				
□ Cooler			Rain Roof	Overall	Size	Length				
☐ Freezer	☐ Outdoor					Width				
☐ Combo										
COOLER DETAILS										
Dimensions:	Length	<b>-</b> 0.	Width	. Height						
Metal Type	Insulatio		Floor Insula			Other Options				
Ext Int	4" Styrene		4" Extruded		250	☐ Strip Curtain				
☐ ☐ Galvanized☐ ☐ ☐ Galvalume	<del>-</del> 2	4" Extruded 4" Ext. w/ Ro				Interior Kick Plate Exterior Kick Plate				
□ □ White Galv	· ·		L NO FIOOI			Inside Ramps				
						Outside Ramps				
Spirit Contribution on Disease	Species print. — securios	Door S	pecifications		100.1	CHANGE OF SE SOME 15				
# of Standard Doo			# of Glass Do			US Cooler to Supply				
# of Other Doors -			Brand							
Size			Opening							
Туре	Phase	RREFR	Refrigerant	_S Voltage		Compressor				
Remote	Single	Ιп	404A	208/220		□ Indoor				
☐ Side	☐ Three		22	115		Outdoor				
□ Тор						☐ Semi Herm.				
☐ Pre-assembled			186	ļ		☐ Hermetic				
Holding Temp.	Brand	<del>-</del>	Accessories			Product Information				
□ 35 □	☐ Copeland☐ Russell		Ext. 4 Yr. Comp Wa Labor Warranty	rranty		Incoming Product				
<u> </u>	□ Bohn		Winter Controls			Product Temp				
		EX39	Compressor Cover			. rodat romp				
		FREEZ	ER DETAILS							
Freezer Dimensions:	Length	-0.	Width_	Height						
Metal Type	Insulatio		Floor Insula	55.55		Other Options				
Ext Int	☐ 4" Extruc		☐ 4" Extruded	ation		Strip Curtain				
☐ ☐ Galvanized	S	_ r _xaaaaa		☐ 4" Ext. w/ Reinforce.		☐ Interior Kick Plate				
☐ ☐ Galvalume				☐ No Floor		Exterior Kick Plate				
□ □ White Galv	Sec					Inside Ramps				
		D 0			Ц	Outside Ramps				
# of Standard Doo	ors (34" x 76")	D001 S	pecifications # of Glass Do	oors	П	US Cooler to Supply				
# of Other Doors -										
Size			Size							
Size			Opening							
	FREEZE	R REFF	RIGERATION DETAI	LS						
Туре	Phase		Refrigerant	Voltage		Compressor				
☐ Remote	Single	n. 26	404A	208/220		□ Indoor				
☐ Side	☐ Three		22			Outdoor				
☐ Top ☐ Pre-assembled						☐ Semi Herm. ☐ Hermetic				
Holding Temp.	Brand		Accessories			Product Information				
□ 0	☐ Copeland					Incoming Product				
□ -10	☐ Russell		Labor Warranty	ALCO P						
	Bohn					Product Temp				
			Compressor Cover			-				
Notes: Freight To:										
			Truck Li							